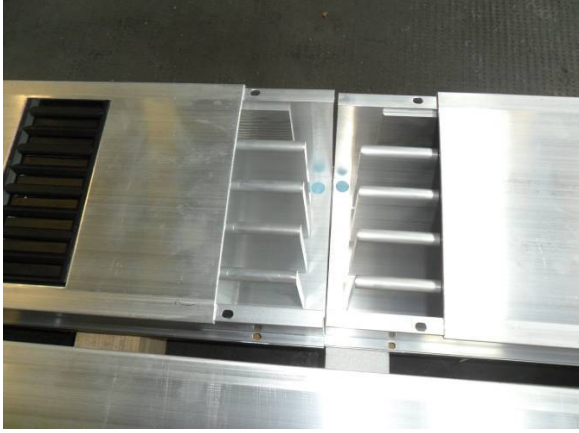
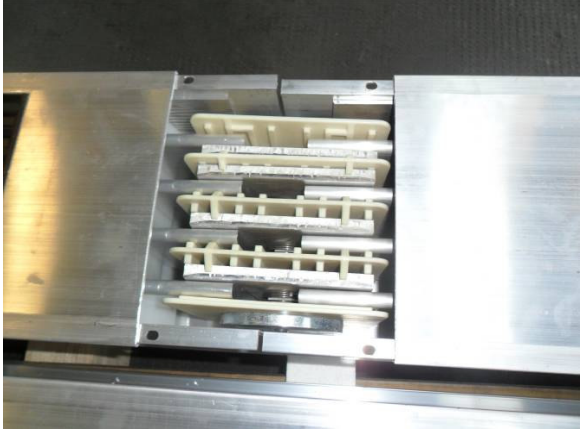
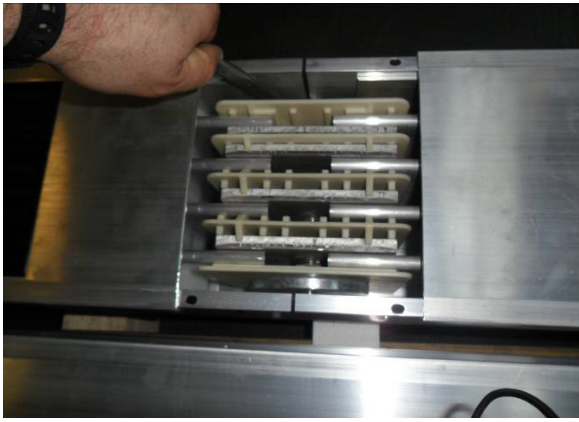
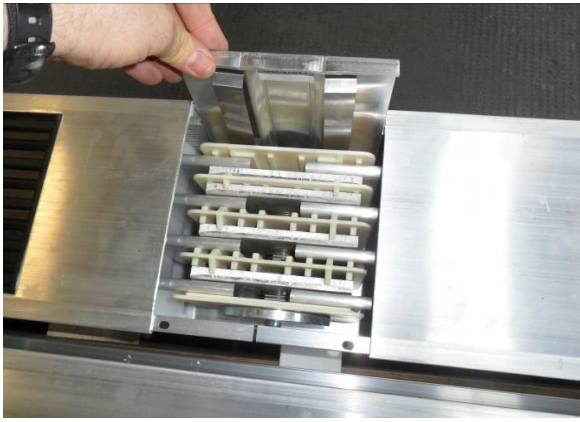
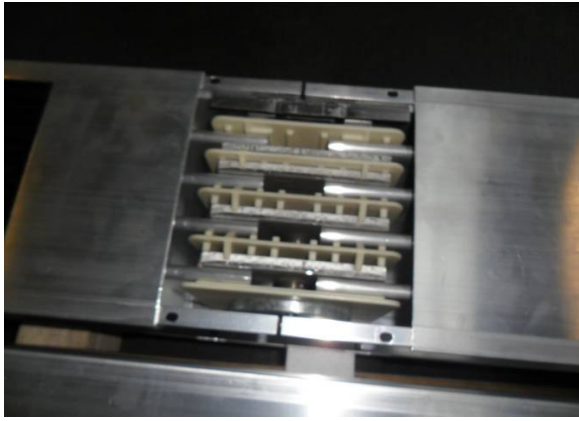


PE JOINT ASSEMBLY GDA5 / GDR5

1	<p>Combine the two elements, making sure that the coupling is correct.</p> 	2	<p>Insert the monoblock joint with the screw's head on the PE side.</p> 
3	<p>Tighten the screw as torque indicated in the catalog.</p> 	4	<p>Insert the PE joint with steel springs facing towards the interior of the duct.</p> 
5	<p>Push inside the PE joint.</p> 	6	<p>Close the connection with metallic coverjoint.</p> 